

How To Re-start the DHCP Server

1. Go into **Mitel** (5000 systems)
2. *Under System Connection tab*, Find Customer, then **Click on Customer**
3. **Right Click** on Customer, Select **Edit** (to view connection option – IP address or modem)
4. *Under System Management Tool tab*, **Click Launch DB Programming** tab
5. **Enter** user name: **admin** and password:_____, **Click OK**
6. **Click Connect**, to connected system database
7. **Click Operations**
8. **Click DHCP Server Operations**
9. **Click Re-start DHCP Server**
10. *“DHCP is about to re-start, do you want to continue?”*
11. **Click Yes**
12. **Click File**
13. **Click Exit**